



May-2018

IMPORTANT NOTE: starting from Sep-2016 Softlog Systems manufactures ICP2(**G3**), ICP2-GANG(**G3**) and ICP2-COMBO(**G3**) programmers additionally to existing ICP2, ICP2-GANG and ICP2-COMBO. Due to nearly full compatibility all of them are referred below as ICP2, ICP2-GANG and ICP2-COMBO respectively. If difference is applied then they are referred as “G3 products” and “non-G3 products”

Installing ICP2 Family Programmers on USB Port (Windows XP/Vista/7/8/10)

1. Power on your PC
2. **Don't** connect ICP2 family programmer to the PC
3. If not done yet:
 - visit our site and get the latest software: <http://www.softlog.com> → Support
 - install ICP for Windows (default directory: C:\Softlog\lcpWin)
4. Run one of the following files:
 - 64-bit OS: C:\Softlog\lcpWin\CP2102_USB_Certified_Driver\CP210xVCPInstaller_x64.exe
 - 32-bit OS: C:\Softlog\lcpWin\CP2102_USB_Certified_Driver\CP210xVCPInstaller_x86.exe
5. Wait until installation is complete
6. Connect the ICP2 family programmer (ICP2, ICP2(HC), ICP2-GANG, ICP2-COMBO or ICP2-Portable) to the PC with a USB cable. Windows will detect a new device and then automatically install the driver. Wait until the driver installation process is complete

NOTE: ICP2(HC), ICP2-GANG and ICP2-COMBO should be powered by a supplied 12V adapter

7. NOTE: if a problem occurs then the latest driver can be downloaded from Silicon Lab site:
http://www.silabs.com/Support%20Documents/Software/CP210x_VCP_Windows.zip