



ICP2-COMBO LAN Configurator

User's Manual

IMPORTANT NOTE:

- Starting from Sep-2016 Softlog Systems manufactures ICP2-COMBO(**G3**) programmer additionally to existing ICP2-COMBO
- Due to nearly full compatibility the both of them are referred below as ICP2-COMBO. If difference is applied then they are referred as "G3 product" and "non-G3 product"

1	Host Computer Requirements.....	1
2	Installation	2
2.1	Software Installation	2
2.1.1	Software.....	2
2.1.2	ICP Family Standard Software (ICP for Windows).....	2
2.1.3	ICP2-COMBO LAN Configurator Installation.....	2
2.2	Hardware Installation.....	2
2.3	Software Requirements.....	2
3	Quick Start (Local Connection)	2
3.1	Quick Start Step 1: Initial Actions	2
3.2	Quick Start Step 2: LAN Configuration.....	3
3.3	Quick Start Step 3: COM Port Redirection	4
3.4	Quick Start Step 3: Check Communication with ICP2-COMBO.....	5
4	Remote Connection.....	6
4.1	Step 1 - Remote Location - LAN Configuration.....	6
4.2	Step 2 - Remote Location - Port Forwarding.....	6
4.3	Step 3 – My Location - COM Port Redirection	6
5	Appendix A: Firewall.....	7
6	Appendix B: Router Configuration Example for Remote Connection	8
6.1	Enter Settings	8
6.2	Port Mapping	8
6.3	Optional: Dynamic DNS.....	8
7	Appendix C: Advanced Features	9
7.1	Selecting Network Adapter	9
7.2	Assigning IP by MAC Address.....	9
7.3	Advanced CPR Configuration.....	10
8	Revision History	12
9	Warranty	12
10	Contact	12
11	Copyright Notice	12

1 Host Computer Requirements

- Pentium-4 or greater IBM PC compatible
- Windows-7/8/10. Contact Softlog Systems for operation with Win-95/98/NT/2000/XP/Vista/
- 1GB of RAM
- At least 200MBytes of hard disk space

2 Installation

2.1 Software Installation

2.1.1 Software

- Visit our site and get the latest software: <http://www.softlog.com> → Support or contact us directly: support@softlog.com

2.1.2 ICP Family Standard Software (ICP for Windows)

The manual assumes that the ICP Family Windows software "ICP for Windows" is installed

2.1.3 ICP2-COMBO LAN Configurator Installation

- Run "IcpLan_setup_XXX.exe" and follow on-screen instructions
- "ICP2-COMBO LAN Configurator" application provides 3 configuration features:
 - "LAN Configuration" discovers ICP2-COMBO programmers and changes IP parameters
 - "COM Port Redirection" creates/removes a virtual COM (Lantronix CPR) port for ICP2-COMBO programmer
 - "Create Remote Port" quickly creates a virtual COM for remote connection

2.2 Hardware Installation

Follow ICP Family User's Manual for hardware installation


2.3 Software Requirements

- ICP for Windows: 8.8.1a or higher
- ICP2-COMBO LAN Configurator: 1.0.1 or higher
- Lantronix COM Port Redirector (CPR): 4.3.0.3

3 Quick Start (Local Connection)

3.1 Quick Start Step 1: Initial Actions


- Connect ICP2-COMBO programmer to the same Ethernet network as your PC:
 - use straight cable for connection via network hub or router
 - use crossover (with red mark) cable for direct connection to the PC
- Run "ICP-LAN" shortcut or "ICP2-COMBO LAN Configurator.exe" which is usually located in "C:\Softlog\IcpLan". An opening screen appears:

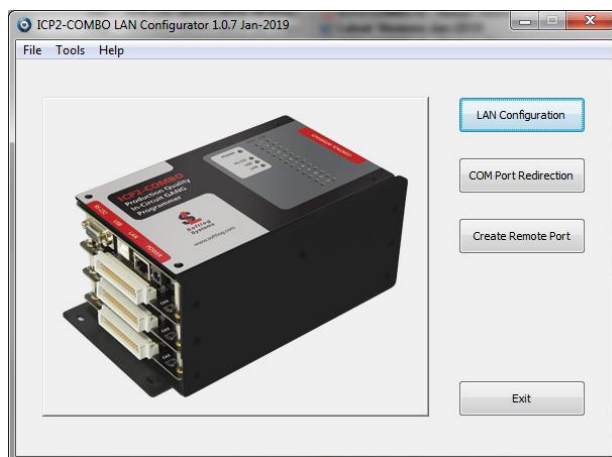


ICP2-COMBO LAN Configurator: User's Manual

3.2 Quick Start Step 2: LAN Configuration

- Click “LAN Configuration” button
- The application automatically starts discovering programmers. You can retry later by clicking “Search” button
- The following screen appears:

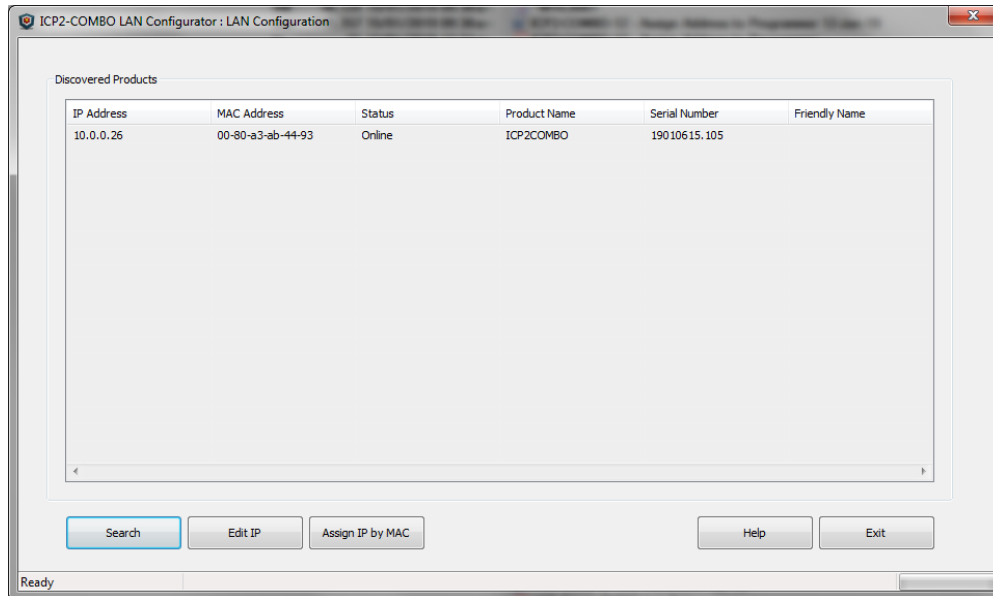


- Before you continue:
 - verify that detected “Serial Number” is the same as printed on the ICP2-COMBO sticker
 - if your programmer was not found refer to “Advanced IP Configuration” below (paragraph 7)
 - if status of discovered programmer is “Unreachable” reconnect the power to the programmer and retry search, otherwise refer to “Advanced IP Configuration”.
- Select (highlight) the discovered ICP2-COMBO programmer
- Double-click on selected programmer or click “Edit IP” button. The following screen appears:

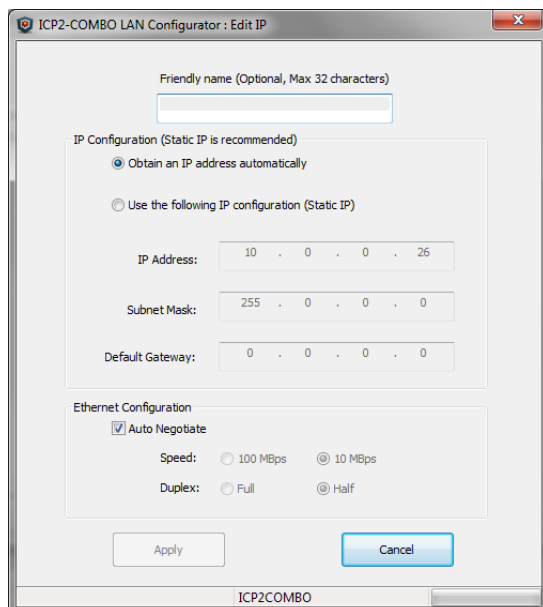

ICP2-COMBO LAN Configurator: User's Manual


- Change your settings as follows:
 - **strongly recommended**: use static IP for reliable operation with a virtual CPR COM port
 - optional: assign a friendly name to ICP2-COMBO, for example "COMBO-12 for tester 4"

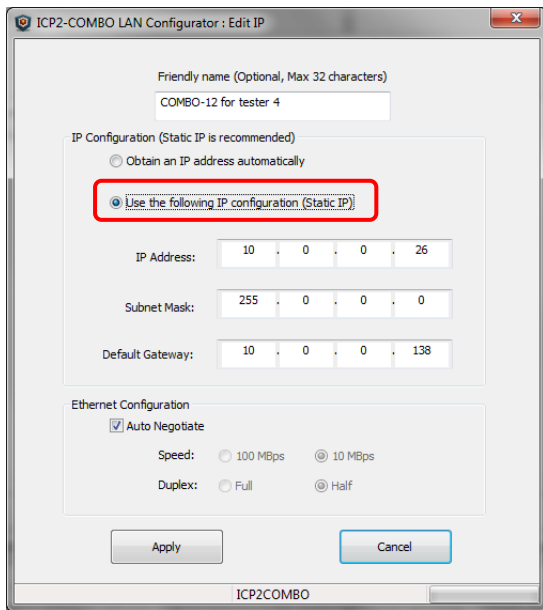

- Press "Apply". Wait until operation is complete (may take till 1 minute)
- Press "Exit"


3.3 Quick Start Step 3: COM Port Redirection

- Click "COM Port Redirection" button (from the opening screen) and select the discovered ICP2-COMBO programmer on the bottom list

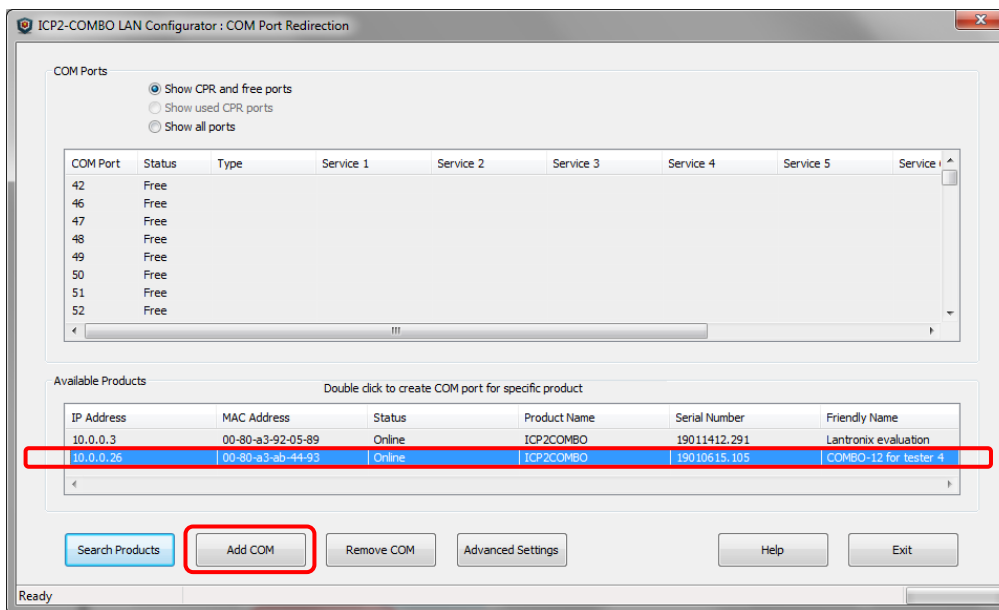


ICP2-COMBO LAN Configurator: User's Manual

- Double-click on selected programmer or click “Add COM” button. The following screen appears:

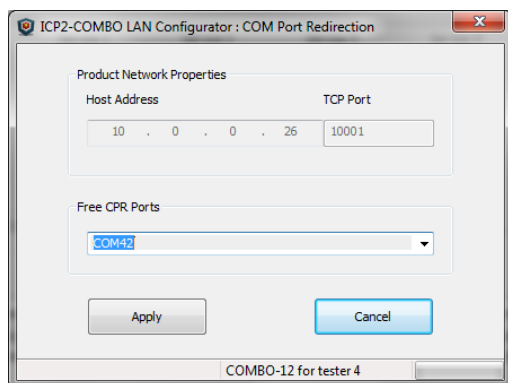

- Select desired COM port number (for example COM42) and press “Apply”. COM Port list on “COM Port” window will refresh automatically → COM42 was successfully created:

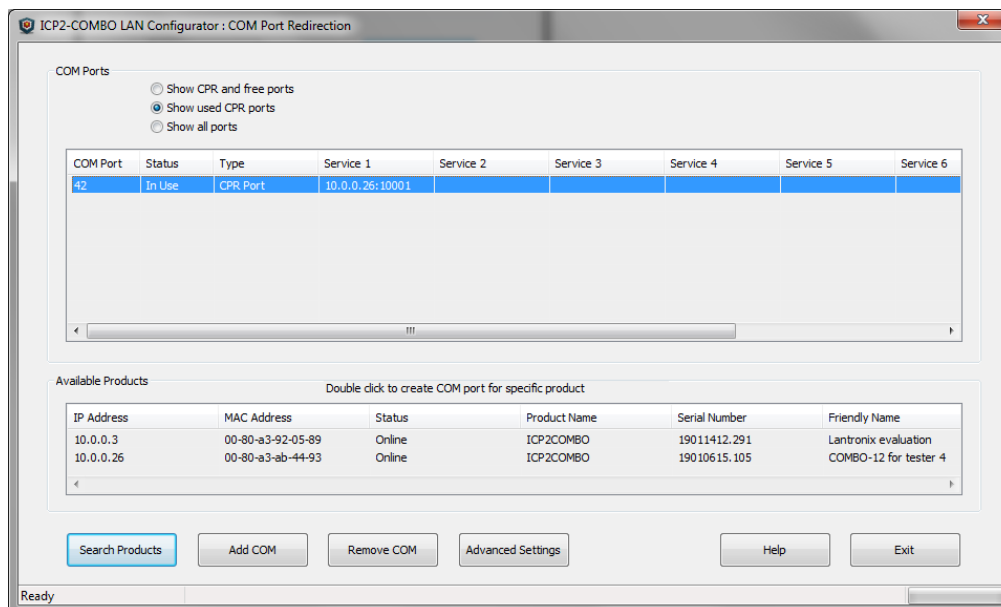

- Press “Exit”
- Exit ICP2-COMBO LAN Configurator

3.4 Quick Start Step 3: Check Communication with ICP2-COMBO

- Run ICP for Windows
- Run Menu → Programmer → Quick Start Wizard:
 - select ICP2-COMBO
 - select number of boxes/channels according to connected programmer
 - select COM42 (as in example)
 - press “Connect” → connection with ICP2-COMBO should be established

ICP2-COMBO LAN Configurator: User's Manual




- press "Cancel" to exit the Wizard

- Exit ICP for Windows

4 Remote Connection

IMPORTANT:

- Remote location: use ICP2-COMBO static IP – see LAN configuration in paragraph 3.2
- Remote location:
 - Option 1: use static Public IP for your router - contact your Internet provider
 - Option 2: use dynamic DNS for your router - see example 6.3

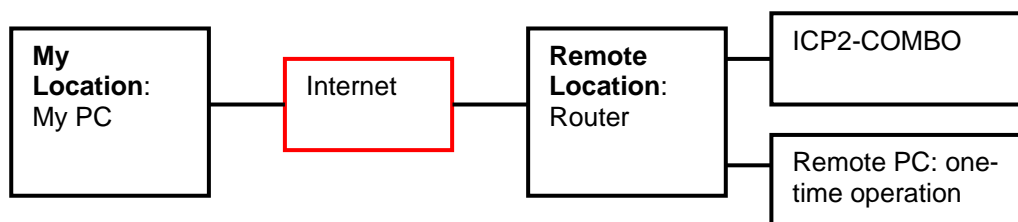

4.1 Step 1 - Remote Location - LAN Configuration

- Connect ICP2-COMBO to the router
- Execute LAN configuration as described in paragraph 3.2


4.2 Step 2 - Remote Location - Port Forwarding

- Forward ports 10001 (TCP and UDP) and 30718 (TCP and UDP) on your router
- Get static Public IP for the router from your Internet provider or use dynamic DNS. In case of "No-IP" service make additional router configurations as shown in Appendix B (paragraph 6)
- Write down Public IP of the router


4.3 Step 3 – My Location - COM Port Redirection

- Validate that ICP2-COMBO is powered and connected on the remote location
- Run ICP2-COMBO LAN Configurator
- Press "Create Remote Port"
- Select desired COM number, for example COM100
- Enter Public IP or domain name of the remote router, for example "tuoathanoarslava.ddns.net" or/and its public IP "89.139.93.253"

ICP2-COMBO LAN Configurator: User's Manual

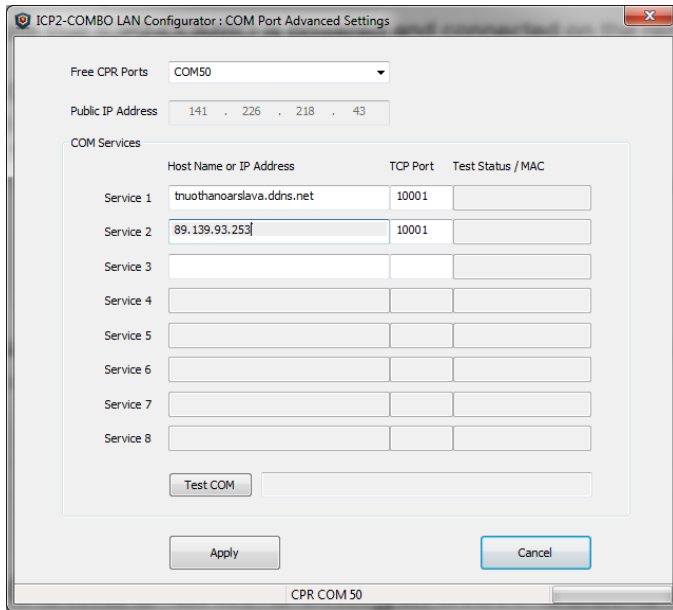

- Press “Apply”
- Press “Test COM”

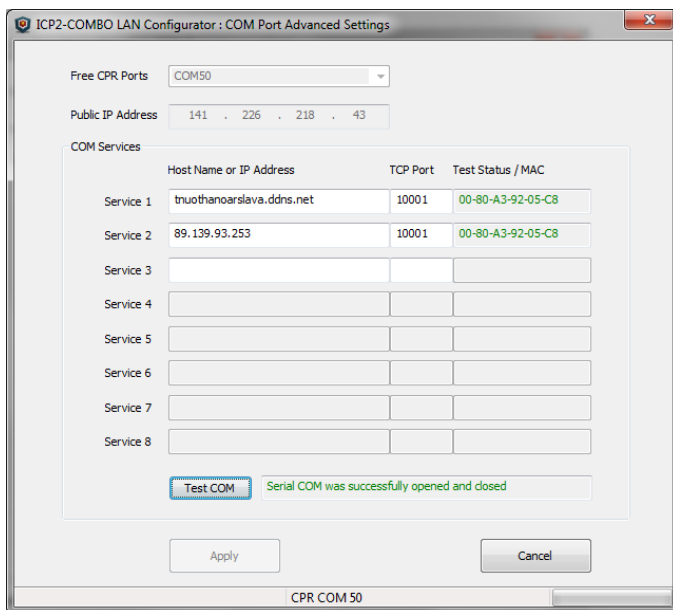

- Press “Cancel” to close the dialog
- Exit ICP2-COMBO LAN Configurator
- Run ICP for Windows and check connection via COM50 as in example 3.4


5 Appendix A: Firewall

Warning: UDP/TCP ports 30718 and 10001 may need to be added to the firewall's exclusion list. You may experience trouble opening a COM port if those ports are not excluded

6 Appendix B: Router Configuration Example for Remote Connection


The example below shows required steps for port forwarding. Your settings will depend on your particular router

6.1 Enter Settings

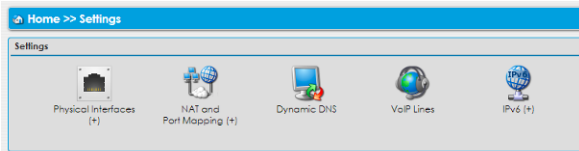


6.2 Port Mapping

- Enter NAT and Port Mapping
- Execute forwarding for ports 10001 and 30718:
 - ICP2-COMBO local IP address is 10.100.102.8 in this example
 - see result screen below:

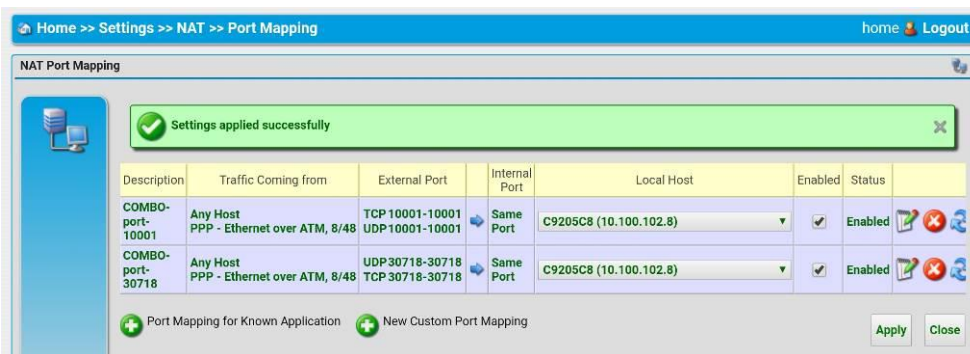

6.3 Optional: Dynamic DNS

You can use a dynamic DNS account instead of a static IP – see example below

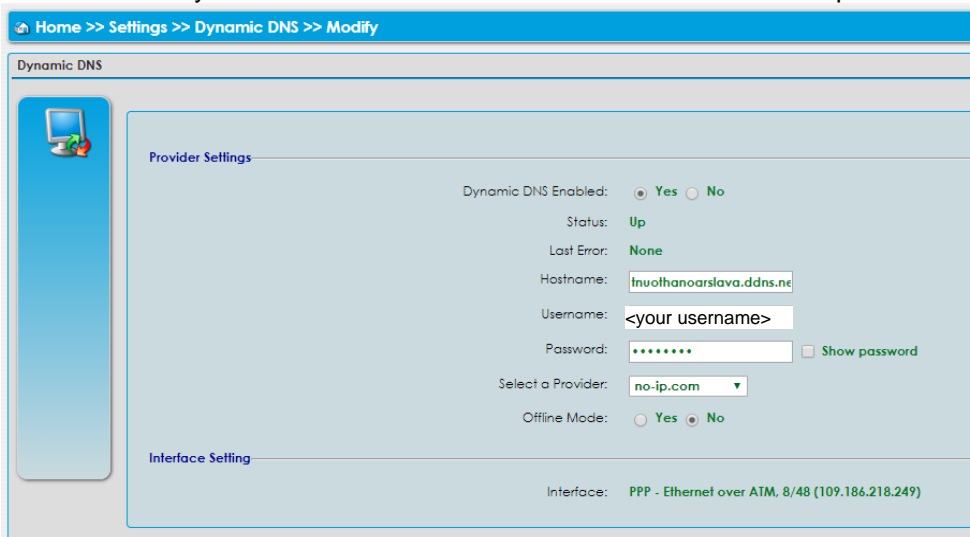


7 Appendix C: Advanced Features


7.1 Selecting Network Adapter

If your ICP2-COMBO programmer is not found or unreachable, perform the following steps:

- If your PC has several network adapters, select the adapter which ICP2-COMBO programmer is connected to by Tools → Options → Select Network:

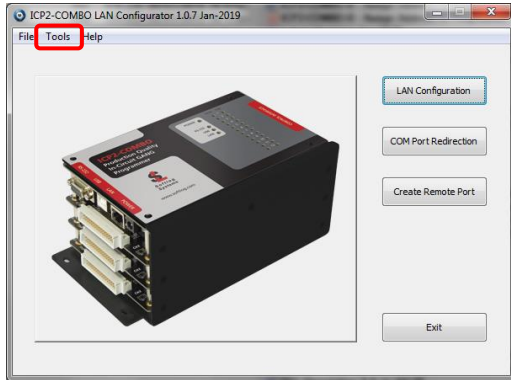


- The following screen appears:

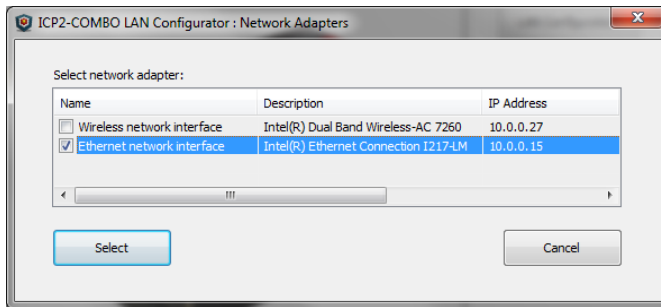

- Select desired network adapter and press Select


7.2 Assigning IP by MAC Address

- Click "LAN Configuration" button

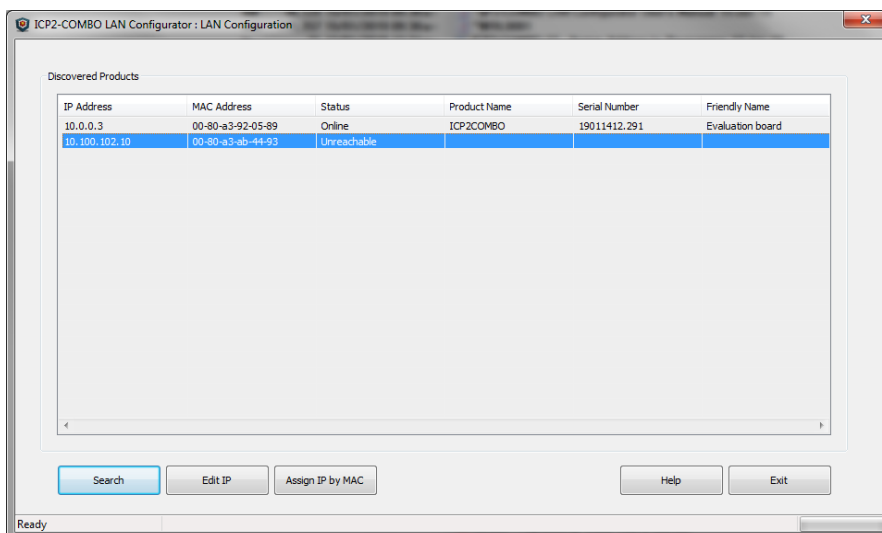

ICP2-COMBO LAN Configurator: User's Manual

- Click “Assign IP by MAC” button:

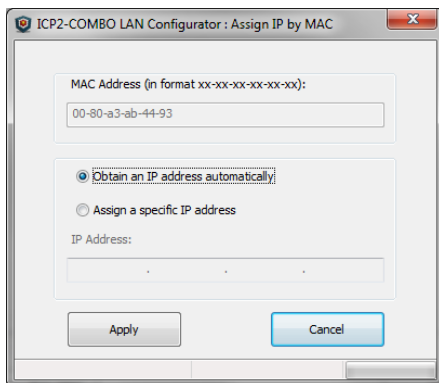


- Validate that MAC address fits the sticker or enter MAC address manually (as printed on the ICP2-COMBO sticker)
- Press “Apply” button. Wait until the procedure is finished (it may take about one minute)
- Once done, “LAN Configuration” window refreshes its list

7.3 Advanced CPR Configuration


There is a possibility to apply additional services to the created CPR port or to change parameters of the existing service. For example, you can add service with host address equal to public (external) IP address of your Ethernet network in order to access ICP2-COMBO programmer remotely. Up to 8 services can be applied to a CPR port.

- Select (highlight) the COM on the upper list

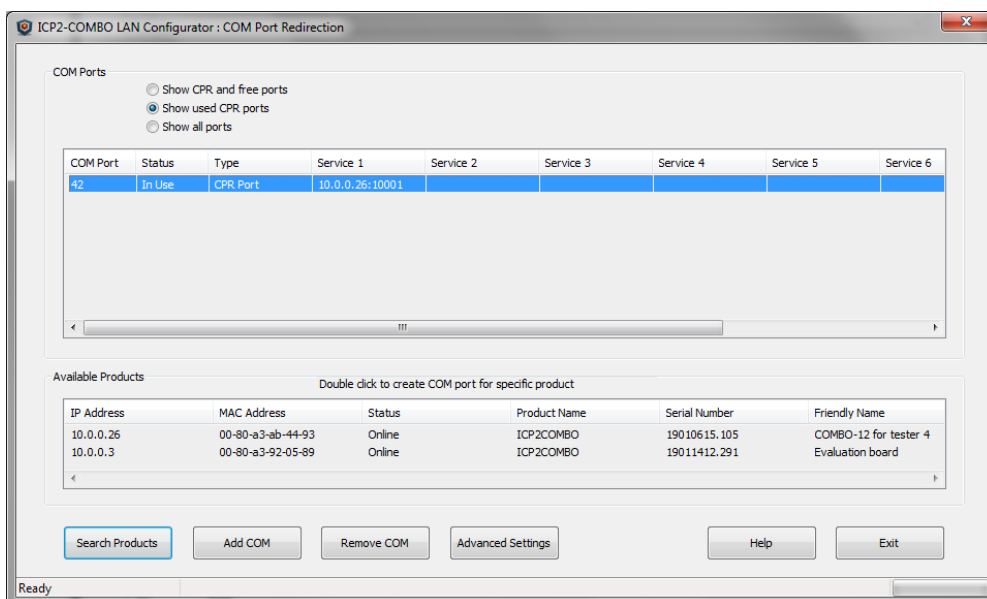


ICP2-COMBO LAN Configurator: User's Manual

- Double-click on selected COM or click “Advanced Settings”. The following screen appears:

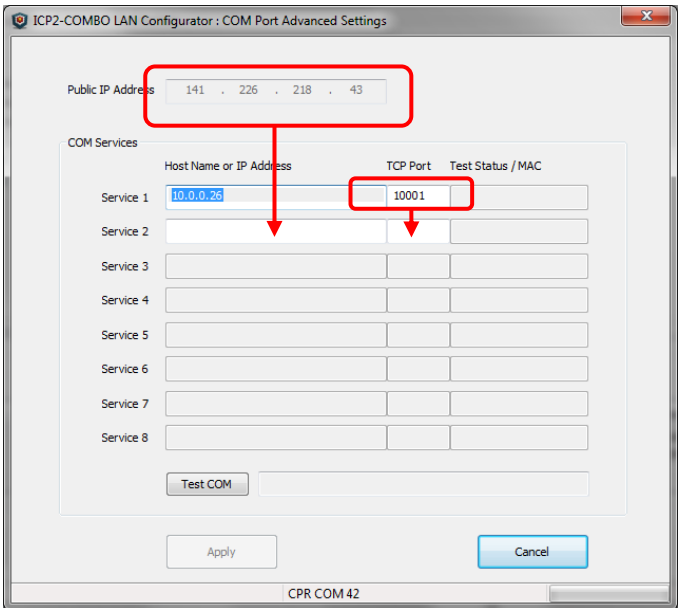


- Copy public IP address

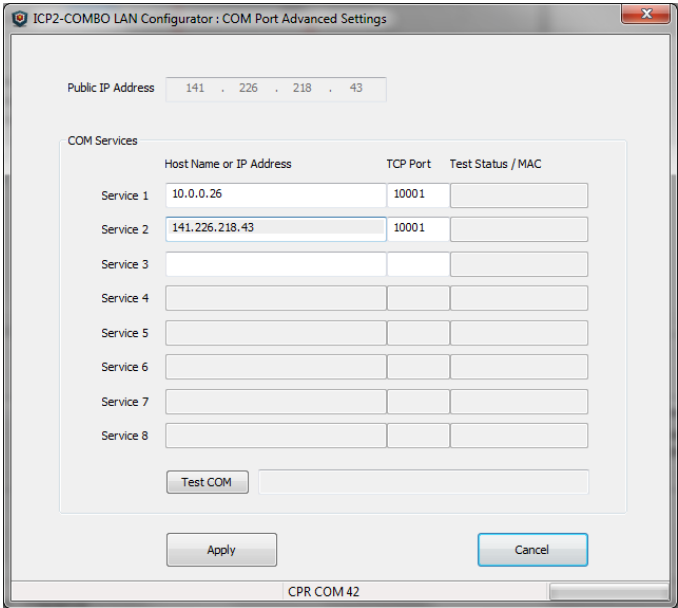

- Press “Apply”

ICP2-COMBO LAN Configurator: User's Manual

- Press "Test COM"

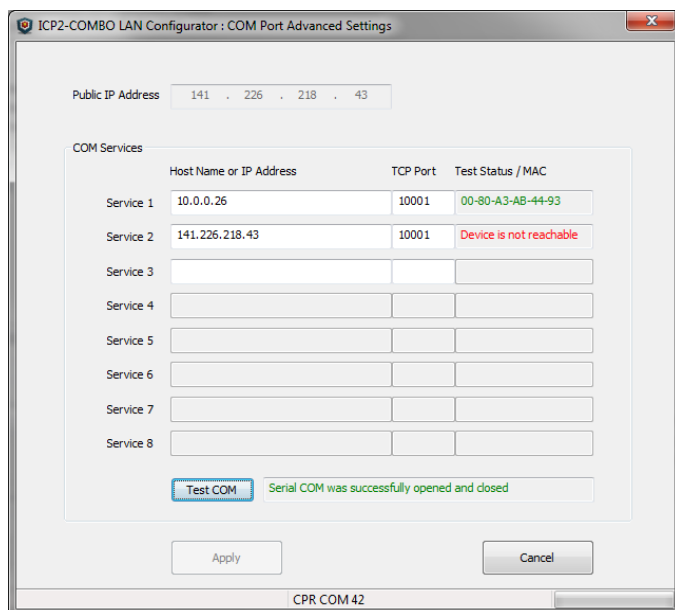

- Press "Exit"

8 Revision History

- Revision 1.0.7 (Jan-2019): initial version of this document

9 Warranty

Softlog Systems (2006) Ltd. warrants this product against defects in materials and workmanship for a period of 1 (one) year. This warranty will not cover programmers that, in the opinion of Softlog Systems, have been damaged due to abuse, improper use, disassembly, replacement of parts or attempted repair by anyone other than an authorized Softlog Systems service technician.

Softlog Systems shall not be liable for any indirect, incidental, or consequential damages, regardless of whether liability is based upon breach of warranty, negligence, strict liability in tort, or any other theory, Softlog Systems will never be liable in an amount greater than the purchase price of the products described by this express warranty. No agent, distributor, salesperson, or wholesale or retail dealer has the authority to bind Softlog Systems to any other affirmation, representation, or warranty concerning these goods.

10 Contact

Softlog Systems (2006) Ltd.
6 Hayotzrim St. Or-Yehuda 60218 Israel
Phone: 972-3-9515359
Fax: 972-3-9527520
Web: www.softlog.com
E-mail: sales@softlog.com, support@softlog.com

11 Copyright Notice

Windows is a registered trademark of Microsoft Corporation. Microchip, MPLAB, PIC and dsPIC are registered trademarks of Microchip Technology Incorporated.